




Installation Guide Ranger Intercooler Pipe Kit

For ease of fitment please ensure that the clamps in the kit are fitted in the correct locations. Each clamp has sizes stamped in them, either a range or single number, see image below for clarity. On the turbo outlet ensure the clamp is seated behind the bead on the turbo, this requires clamp to be oriented so it doesn't foul on engine side.

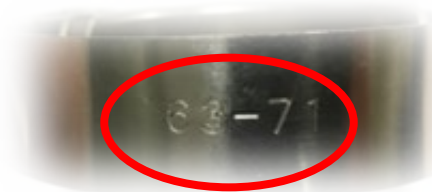

Turbo outlet side



Throttle body inlet side



48-59
57

57-65
65

57-65
65

63-71
70

Intercooler Inlet

Ensure clamp ferrule is correctly seated/assembled to the clamp.



68-76
76

68-76
76

**ENSURE PLUG IS
TIGHT**

68-76
76

63-71
70

Intercooler outlet



ENGINEERING PERFORMANCE SINCE 1955