



Small Block Ford

Port Profile Template

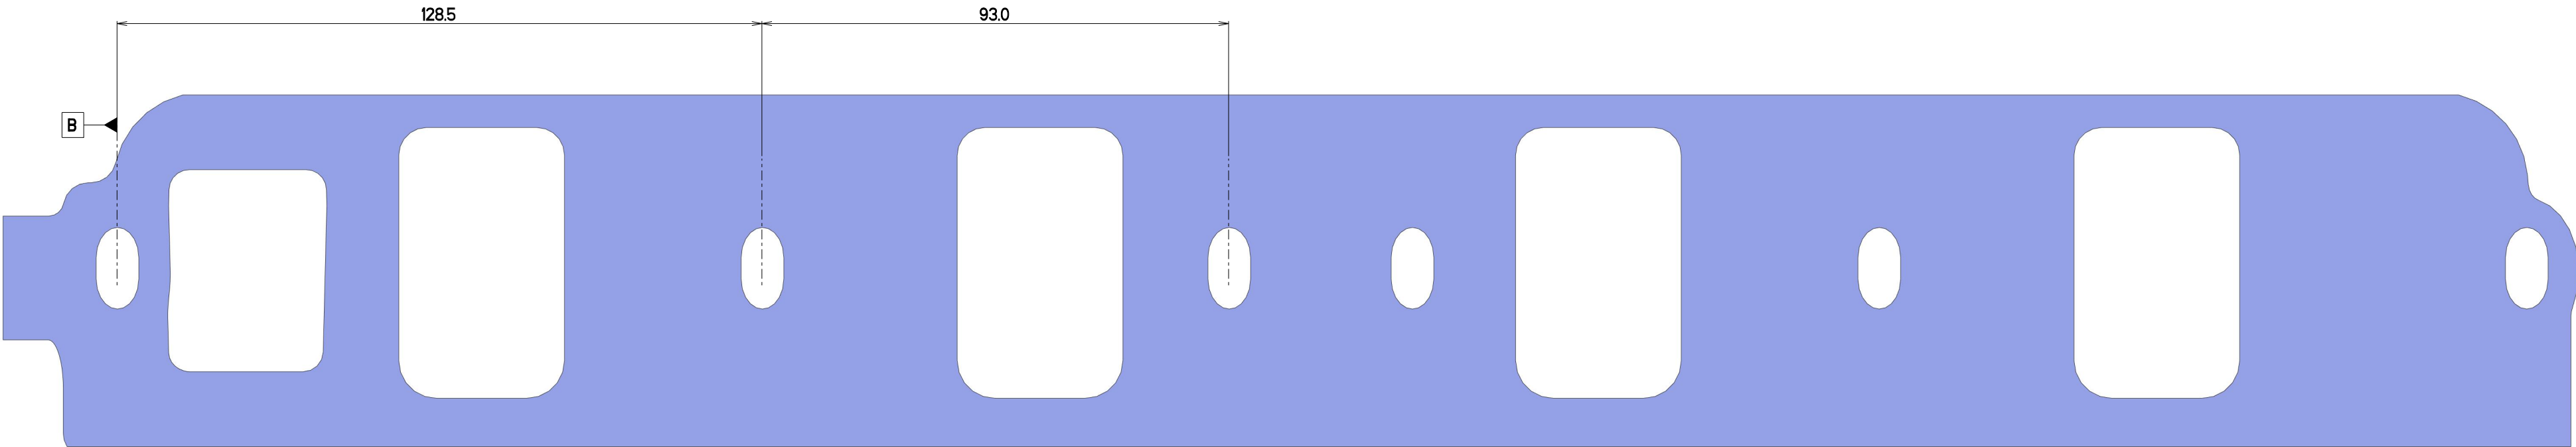

INSTRUCTIONS:

- Print on A2 paper and confirm scale using the 50.0mm reference line above.
- Cut out port and bolt hole profiles as marked.
- Place on cylinder head to check bolt hole and port alignment.

Disclaimer: For guidance only. No responsibility is accepted for incorrect use or results from this template.

← FRONT
RH MANIFOLD FLANGE - SBF

E N G I N E E R I N G P E R F O R M A N C E S I N C E 1 9 5 5